

RCMS

1 clear rls infomation

clea rls infomation [port *num*]

```
rcms#clea rls infomation port 1  
rcms#
```

2 clear rls session

clea rls session [id *num*]

1

```
rcms#clear rls session
```

```
rcms#
```

2

```
rcms#show rls session
```

connect id	IP
61	192.168.199.61
41	192.168.201.19

```
rcms#clear rls session id 61
```

```
rcms#
```

3 debug rls

```
debug rls
```

```
rcms#debug rls user
```

```
rcms#
```

4 facility enable

facility enable level *num* **secret** {0|7} *line*

no facility enable

LINE

```
rcms(config)#rls enable  
rcms(config)#
```

6 rls ip

```
rls ip ip  
no rls ip
```

```
rcms(config)#rls ip 192.168.10.254  
rcms(config)#
```

7 rls load-config

```
rls load-config
```

```
RCMS#rls load-config
```

```
RCMS load file OK!
```

```
RCMS#
```

8 show rls command-string

```
show rls command-string
```

```

Vendor :1 , type:3:
    DOWN CFG: copy xmodem flash:config.text
y    DOWN SENS: copy xmodem flash:script.text
    UP CFG: copy flash:config.text xmodem
    CLEAR CFG :copy flash:default.text flash:config.text
y    RELOAD:reload
    WAIT RELOAD:120

RCMS#

```

9 show rls infomation

show rls infomation

```

RCMS#sho rls infomation
RLS client socket id :0 , ip addr:0.0.0.0

PORT:0 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:1 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:2 idle

```

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:3 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:4 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:5 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

time left:0, facility ready and not allow use

PORT:11 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:12 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:13 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use