 
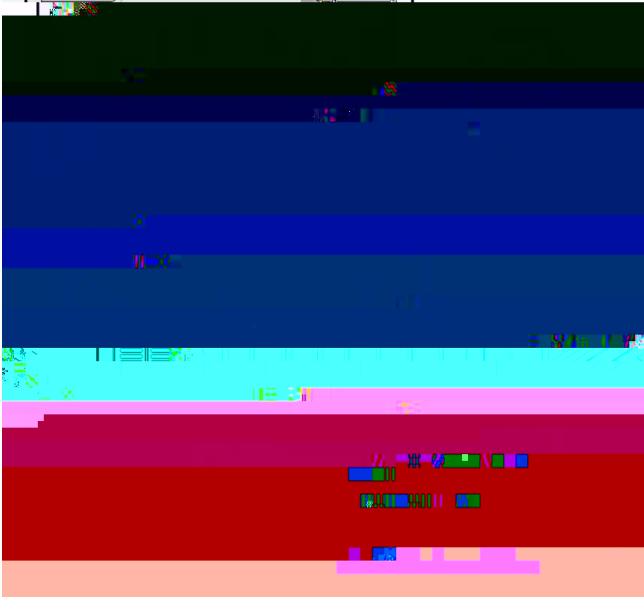 


RGOS 11.X

N18K&S86E&S78E

A solid red rectangular bar located to the left of the "Contents" text.

Contents

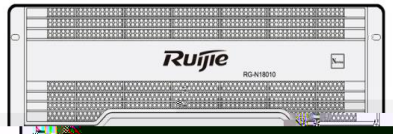

1 Console

2 Telnet/SSH

CLI

3 WEB

CLI

4 SNMP

CLI

 
5 DCMI

CLI


Console



RJ-45 Console 8 1 DB-9 USB-
RS232 9 Console COM USB DB-9 USB-

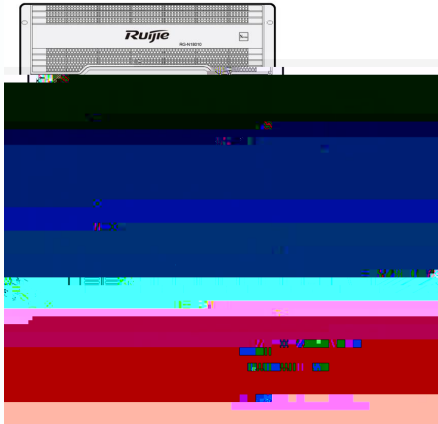

Console

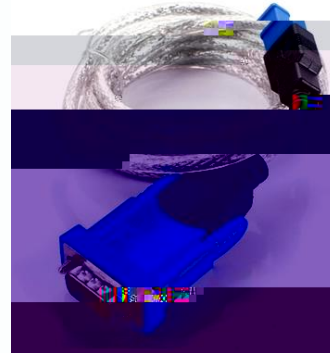 

CRT

SecureCRT

9600

8

1

| Console



PC

1

2

Console

CRT

CMII

```
Boot 1.2.4-9567cfc (Build time: May 23 2014 - 11:27:43)
[ OK ]
Scanning devices (MII/TA/IZactions...)
```

3-4

Press RETURN to get started

```
*Jul 21 17:24:27: %OIR-6-INSCARD: Card inserted in slot 1.
*Jul 21 17:24:27: %7: warning, default install package not exist, auto sync upgrade halt!
Press RETURN to get started
```

" Enter"

| Console



Console

CLI

Telnet/SSH

 
WEB

CLI


Console



CLI

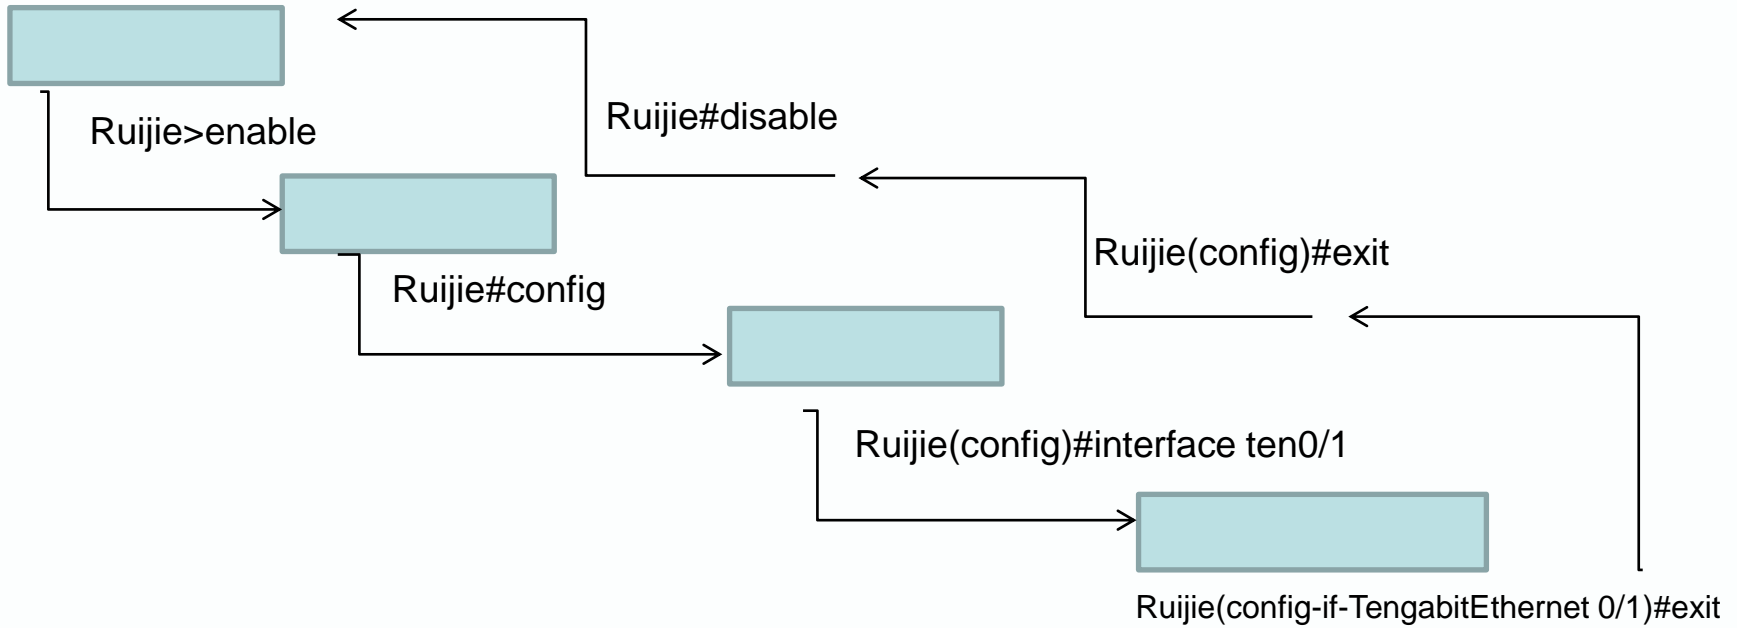

Console

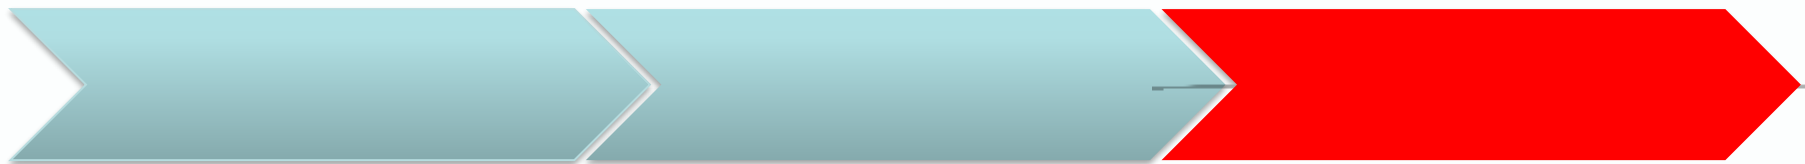 

?

11.X CLI

10.X

CLI

Ruijie#show version /show version slots / show cpu /show memory /show interface status /show ip route /show arp /show fan / show power /show temperature....

Ruijie#show run //

Ruijie(config-if-GigabitEthernet 1/1)#show this //

Ruijie#wr //

Ruijie#ping 8.8.8.8 // Ping

Ruijie#traceroute 8.8.8.8 // traceroute

Ruijie#telnet 192.168.3.254 // telnet

Ruijie#debug ip icmp //



 
Telent

 


Smart WEB



WEB

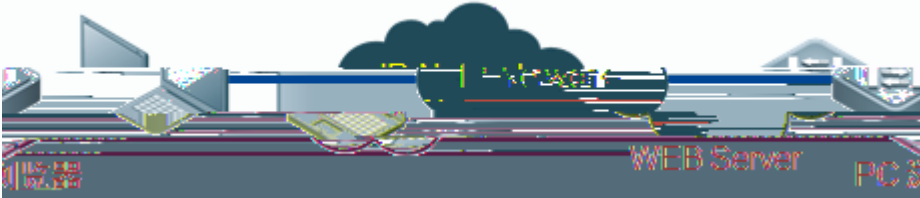

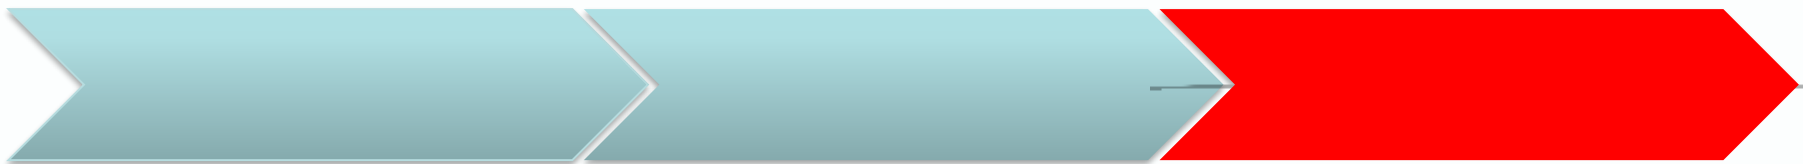

N18000
N18000

RGOS11.0(1b2)
RGOS11.0(1b2)

A solid red horizontal bar located to the left of the "Contents" text.

Contents



RIITE

www.riite.com.cn

I U



show version detail

system software number

4008)

U

U

USB U

U

 
show usb

usb id, usb remove xx

U



CMI
 CMII
 1
 FLASH
 8G
 sandisk U
 (8G)
 U

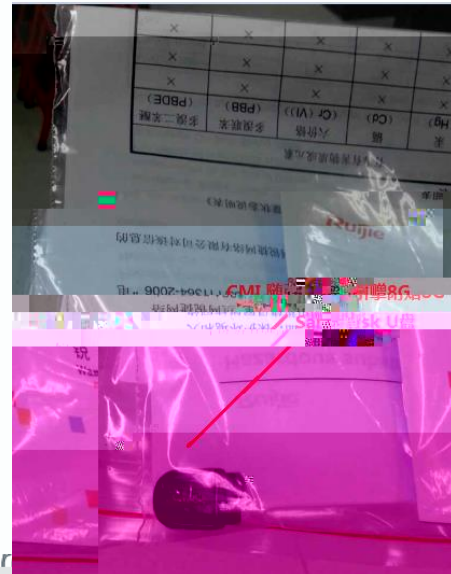

Runto

www.r

I U



1 upgrade

Ruijie#dir usb0: USB

Ruijie#**upgrade** usb0:/xxxxx_install.bin xxxx_install.bin U

2 100% show upgrade status

```

N18000#show upgrade status ^
[slot: M1]^
dev.type: ca-octeon-cm^
status : upgrading^
[slot: I1]^
dev.type: ca-octeon-lc^

```

```

[Slot 1]:Upgrade processing is 100%^
[slot: M1]^

```

3 /FE 100% success (4-5 FLASH



I U

 


1

3-5

2

FTP

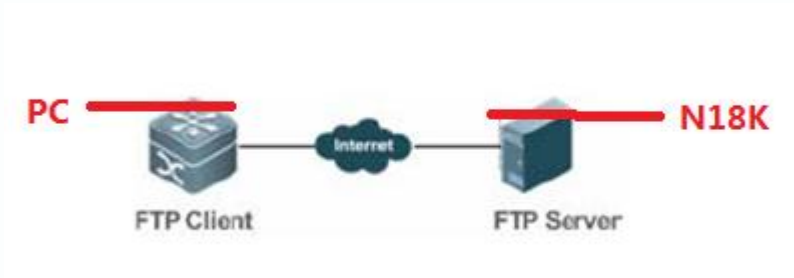

```

1          FTP Server          USB0          CMI          FLASH
          CMII          FLASH

Ruijie(config)#ftp-server username admin
Ruijie(config)#ftp-server password ruijie
Ruijie(config)#ftp-server topdir usb0:/          ---          U
Ruijie(config)#ftp-server timeout 300
Ruijie(config)#ftp-server enable

2      PC      FTP Client      FLASHFTP          FTP          N18K
PC      N18K

3      PC      FTP          FTP Server

4      Upgrade          USB
  
```

FTP

 
USB

USB
Upgrade

FTP

FTP
U

TFTP

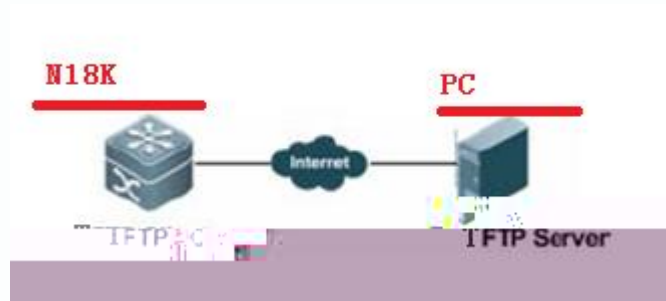

1	PC	TFTP Server		PC	N18K
2	N18K CMI	TFTP Client CMII	FLASH	TFTP	USB
Ruijie#copy tftp://192.168.1.1/n18k_20140703_install.bin					
usb0:/n18k_20140703_install.bin					
3		Upgrade			USB

TFTP

USB

TFTP

TFTP

USB
Upgrade

U

TFTP



FTP

FTP

TCP

TFTP

UDP

TFTP



1 11.X

bug

BUG

2

WEB

 
Web

Web

MSC-ED

1 web

2 - - - - -

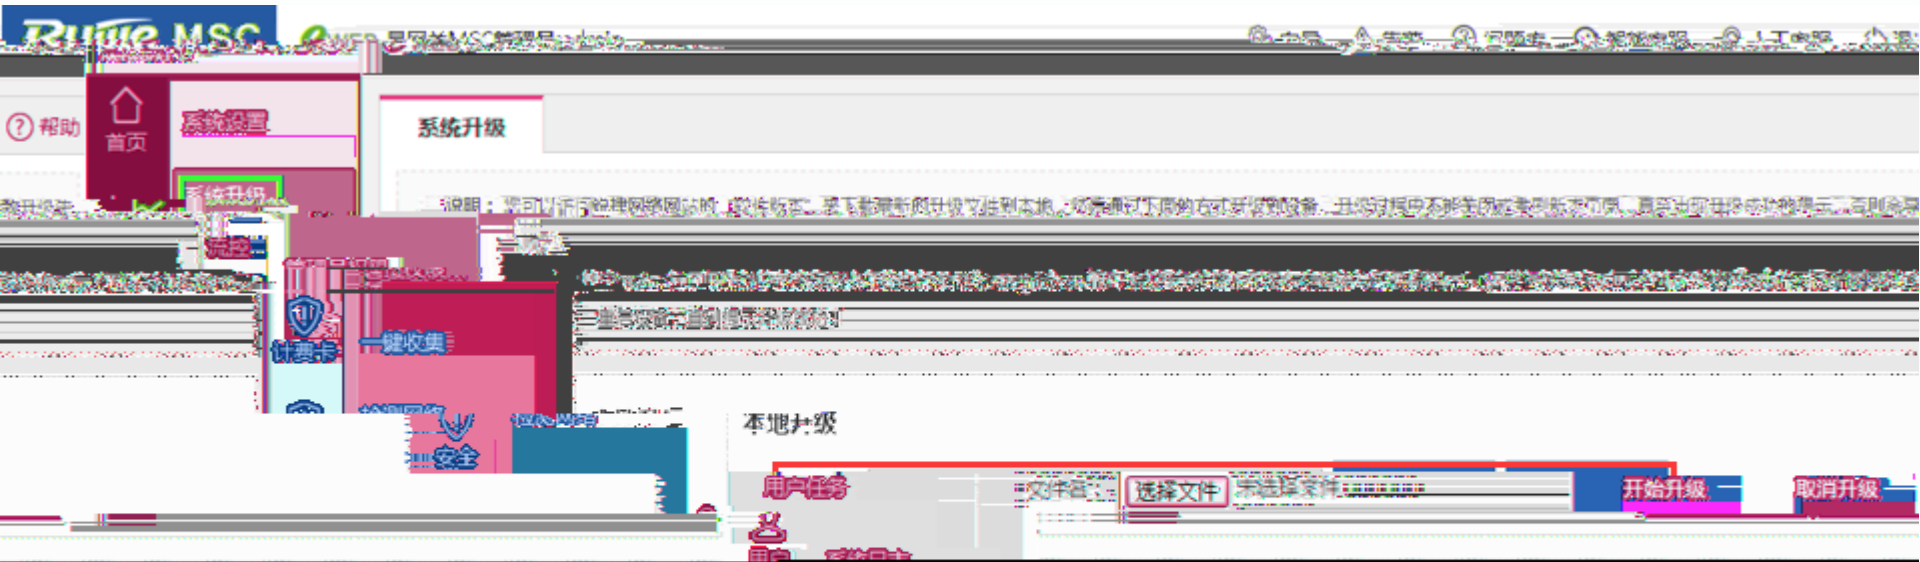

- www.ruijie.com.cn
- www.ruijie.com.cn/service.aspx
- support.ruijie.com.cn

- webchat.ruijie.com.cn
- 4008-111-000