





TRUITE

```
WS18000-1B11#show ac-config client
```

```

=====
Name: temp/2
EIR: EIR is created, EIR is located, EIR is located
Current SSID number:
Channel: 8 = 11
Power level: 100

```

```
Online AP number: 33
Offline AP number: 156
```

 
第三频

 
AP ID	AP Name	Radio	IP Address	MAC Address	Radio	Radio	Up/Off time		
c84.b2cc	1	E 3 11	80.2.E.0.157	100	9:16:53:19	Run	19#1E_fangjian_Mid_AP740-1	172.18.57.219	5869.6

```
WS18000-1B11#show ac-config client
=====
show sta status
AP : ap name/radio id
Status: Speed/Power/Freq/Work Mode/Beaming State/MU-MIMO/E-Auth/Disable Power Save/D-Auth/Disable Power Save
```

STA MAC	IPV4 Address	AP	wlan vlan status	Asso-Auth	Net Auth	Up time
F48b.32a3.04e3		temp/2	6 1731 9.0M/E/ac/R/mu	MAB	WEB	0:20:37:33

终端

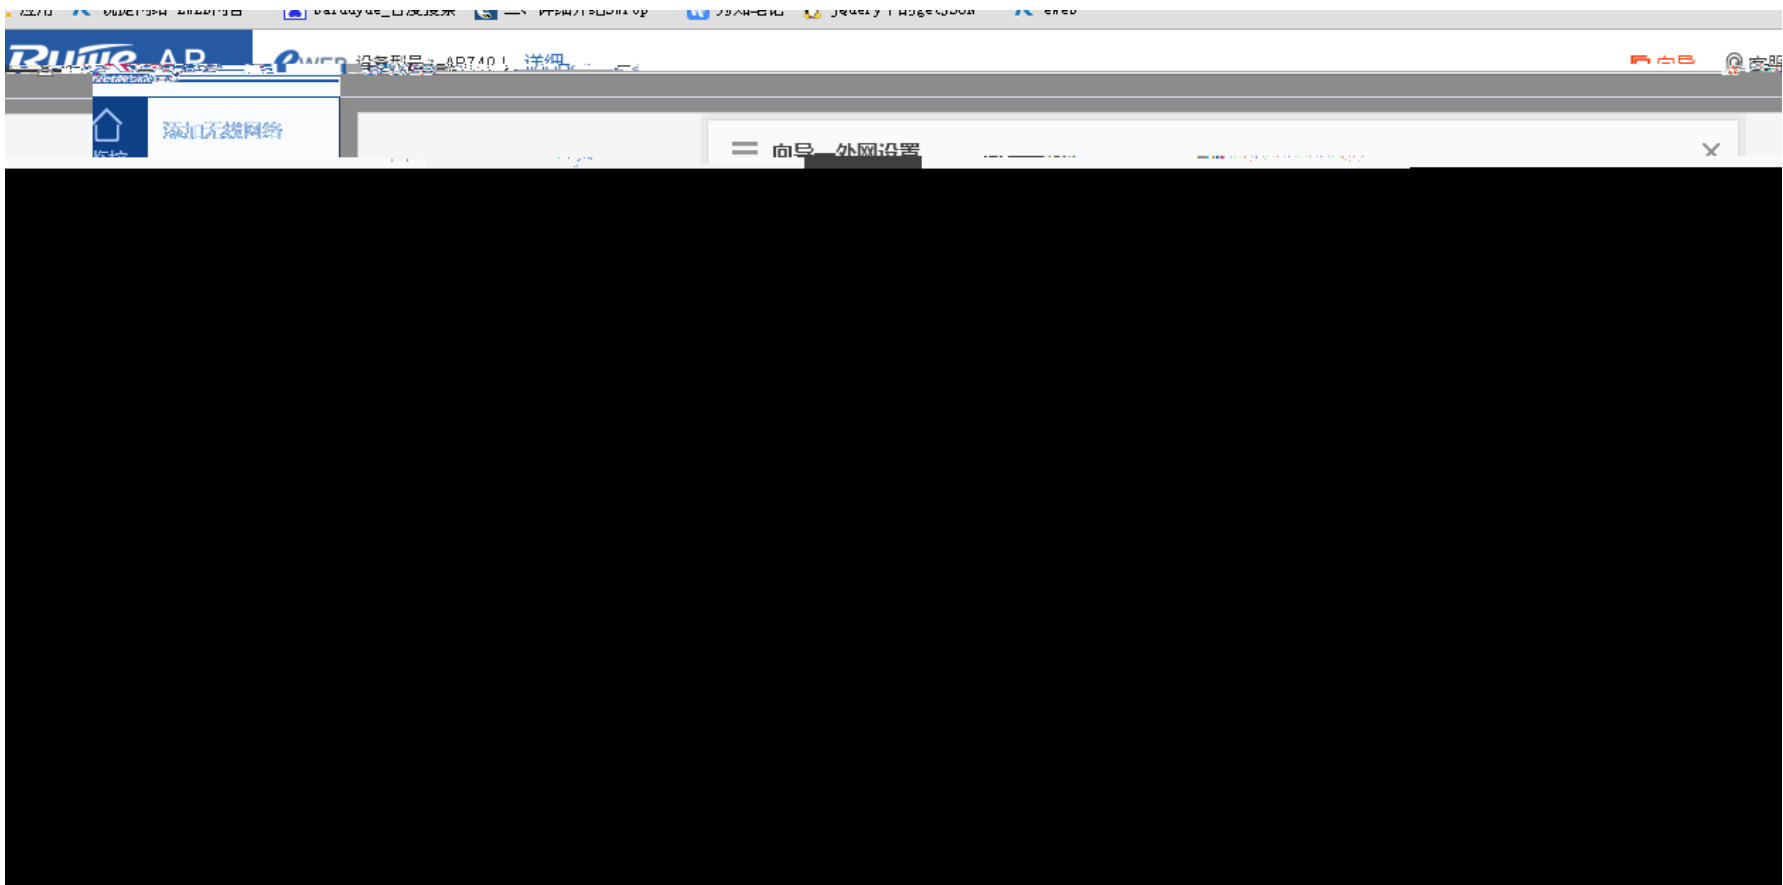


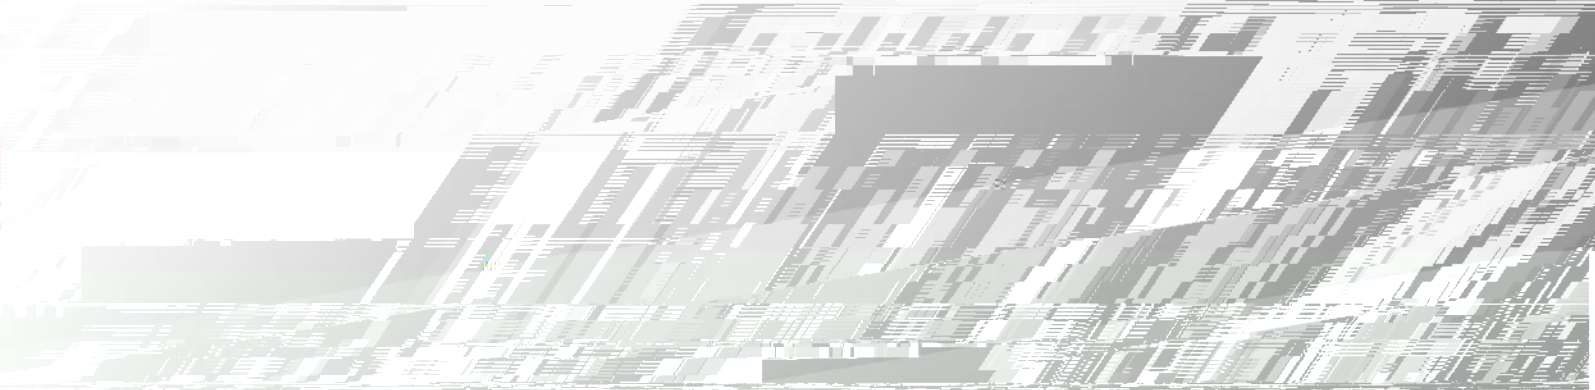

TRUITE

 Ruijie(config-ap)#no 11asupport enable radio 2 ----->配置禁用11a网络



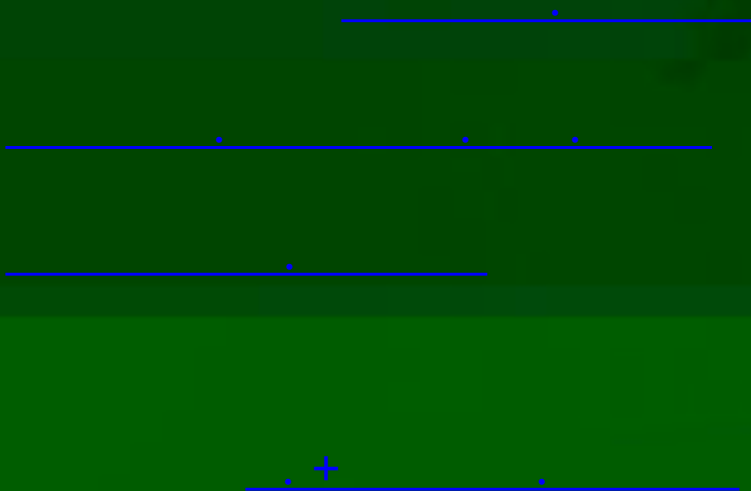

|| 7kuille 7kuille